



PRO ROLLER User's Guide

THE PRO ROLLER SERIES

There are four convenient sizes of the Pro Roller to choose from:

Pro Roller 3: heavy-duty protection for complete location equipment including full lighting gear.

Pro Roller 2: a hard-working case for a digital or 35mm SLR system, medium or large format gear or pro video equipment.

Pro Roller 1: serious protection for a variety of different systems and sized to qualify as airline carry-on.

Pro Roller Mini: a tough, versatile rolling case designed to fit under airline seats.

CUSTOMIZING THE INTERIOR



Photo 1

The Pro Rollers' padded insert has hook and loop dividers that are movable to accommodate a variety of systems. Simply detach the hook and loop strips on the divider, position the divider appropriately, and then re-stick the hook and loop strip. *See photo 1*



Photo 2

The Insert on the Pro Rollers 1, 2 and Mini is removable and self-contained. Simply lift the insert out of the Pro Roller by pulling up on the straps. You can also use the Pro Roller as a piece of regular luggage (garment straps included). *See photo 2*

The Insert on the Pro Roller 3 is not removable.

BUNGEE SYSTEM

Use the bungee cord web on the front of the Pro Roller 1 and 2 to secure large reflectors. Clip the bungee to four d-ring attachments and slide the reflector under the bungee webbing. There are six d-rings on the Pro Roller to allow you two different positions for the webbing. *See photo 3*

The Pro Roller 3 has an oversize pocket to accommodate the reflectors.



Photo 3

Over >>

CARRYING ADDITIONAL BAGS



Photo 4

The Pro Rollers 1 & 2 have a bungee system on top of the bag that allow you to carry additional bags or items.

Depending on the size of the additional bag or item, clip the bungee to two of the d-ring attachments on the Pro Roller, wrap the bungee around the item and clip the other two d-ring attachments in place; or clip all four d-rings in place and slip the item underneath the bungee webbing. The Pro Roller 3 has a bungee system made to hook to 2 d-rings. *See photo 4*

The Pro Rollers 1 & 2 come with an adjustable briefcase strap. Unlock the quick-release buckle, slip the strap through the briefcase handles, clip the buckles and cinch.

SLIPLOCK ADD-ONS

Attachment loops on the sides of the Pro Roller 3 can be used to carry SlipLock add-on pouches and accessories.

1. Slide the SlipLock attachment tab through the attachment loop on the Pro Roller. *See photo 5*
2. Press the hook and loop panels together to secure.
3. Some pouches have a second security tab. Fold the second tab over the first and press to fasten the hook and loop panels.



Photo 5

TRIPOD HOLDERS



Photo 6

The Pro Rollers 1, 2 & 3 each come with two removable tripod holders and the Mini comes with one. You can attach the tripod holder to either side of the Pro Roller.

1. Release the hook and loop fabric from the inside of the holder and unwind strap.
2. Feed tongue through the top of the vertical slot on the Pro Roller webbing loops.
3. Wrap tongue around holder and tuck inside to secure hook and loop panel.
4. Attach all 3 sets of Quick-Ties by threading one half of the quick-release buckle through the horizontal webbing loops above the tripod holder and fasten buckle.
5. Insert 2 of the tripod's legs into the tripod holder.
6. Tighten the bungee cords by pulling the cordlocks until the tripod is held securely in place. *See photo 6*